

17 mm  
17 mm





# Xcluder™ Low-profile Pest Control Door Sweep Installation Instructions

Use for Part #s: 162500, 162520, 162642

Thank you for your purchase of an **Xcluder™ Pest Control Door Sweep**, the best way to close the door on unwanted pests.


## Tools Required:

1. Phillips head screwdriver
2. Drill and 3/64" bit
3. Hacksaw – *only needed if the sweep needs to be trimmed to fit*
4. Sturdy scissors – *only needed if the sweep needs to be trimmed to fit*



## Installation Instructions:

1. Sweep should be mounted on the outside of the door.
2. Measure door and cut sweep to fit. This step may not be necessary. If cutting is required, cut excess material from the end of the sweep that will be on the hinged side of the door.
3. When cutting the sweep, best results are obtained by first using a hacksaw to cut through the aluminum retainer and then sturdy shears to cut the rubber and Xcluder™ filling. NOTE: Sawing through the Xcluder™ filling is not recommended.
4. Close door. Hold sweep at bottom of door. Tap down until contact is made between the sweep and the threshold.
5. Mark Screw Holes
6. Drill pilot holes for the screws using a 3/64" bit
7. Attach sweep with the included stainless steel mounting screws. Adjust sweep position so sweep does not impede proper closing and latching of door.

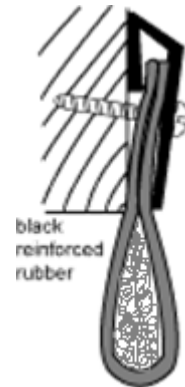

**IMPORTANT:** Make sure the door sweep makes even contact with the threshold or floor across its width.

Version—BG1, 4-25-16