




"The Solution Providers for Safety"

www.adhbaseline.com

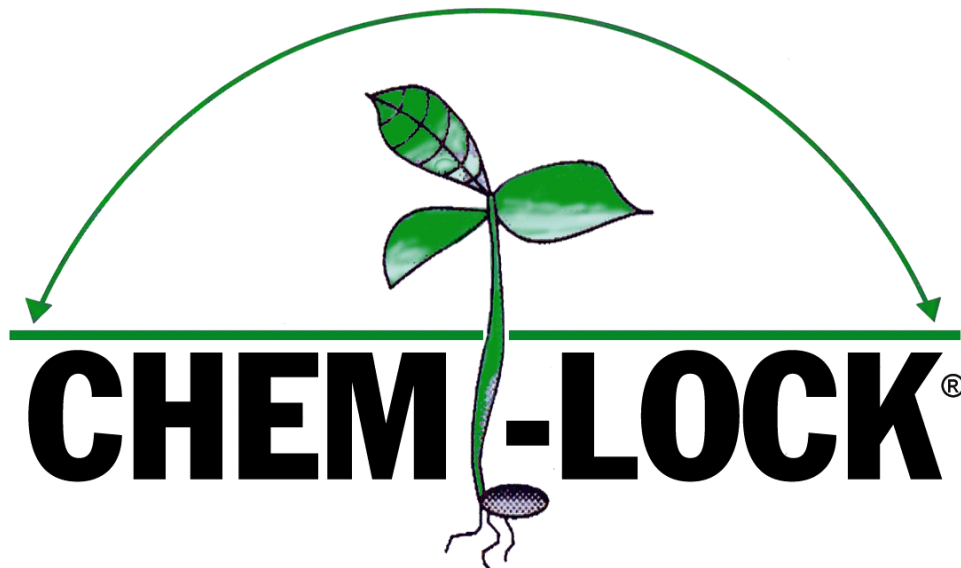

***"The Gas-tight Solution to
Safe Chemical Transport"***



Guide to Users

The ADH BASELINE LTD ™, BASETECH®, CHEMLOCK® are registered trademarks of ADH Baseline Ltd

Copyright 2013 rights reserved

CHEM-LOCK® GUIDE TO USERS.

(Applies to both Dual and Pest Partner boxes)

Thank you for recognizing your safety responsibility & complying with your “Duty of Care” to both YOU & the Environment by choosing this chemical transport box.

This box or boxes are designed to sometimes carry very toxic compounds in a gastight secure mode, to maintain this please take note and action the following points :

Both boxes are suitable for the transport of aluminum phosphide and other related compounds along with any standard pesticides.

Additionally the larger Dual box is designed to alternatively be used for the transport of virtually ALL UK / European Approved Agro Chemicals.

PLEASE NOTE :

WHEN TRANSPORTING aluminium phosphide YOU MUST ONLY CARRY THAT SINGLE COMPOUND.

DO NOT PUT ANY PART USED CANNISTERS OR UNCLEARED APPLICATIONS BACK INTO THE CHEMLOCK BOX AS THERE IS A SPONTANEOUS COMBUSTION RISK. ALWAYS WEAR APPROPRIATE RESPIRATORY PROTECTION/ PPE WHEN WORKING WITH THIS COMPOUND.

Please refer to RAMPS Guidance.

- The boxes are only gastight when the lid is fastened down with the over-centre locks in closed position. To ensure increased security, provision is made to accommodate a suitable padlock through the centre lock – available from your supplier through us.
- Special care should be made to ensure that the high ACN nitrile rubber compound seal is not damaged in any way.
IF DAMAGE HAS OCCURRED YOUR SAFETY COULD BE COMPROMISED, DO NOT USE BOX UNTIL SEAL IS REPLACED !
- During Transport we recommend that the box should be strapped down or secured in some way to fixed points, this is essential for normal safety reasons but is a **MUST** when the box is loaded with any chemicals.
- The detachable lid is designed to be inverted & used as a spill tray when loading or standing knapsacks or similar applicator equipment in it.
- Please dispose of any box spillages that may occur in the prescribed manor, utilising the appropriate PPE for the compounds involved.
- Please observe the “Manual Handling Regulations” weight wise when the box is loaded with agro chemicals.
- We recommend that the whole box is replaced if a critical fault is found, or has been subjected to severe conditions.
- Please monitor / check weekly & record the integrity of the Chemlock box.

CHEM- LOCK® SAFETY INSPECTION SHEET.

[illegible]

Please Tick/ v the relevant boxes